



## Monitor

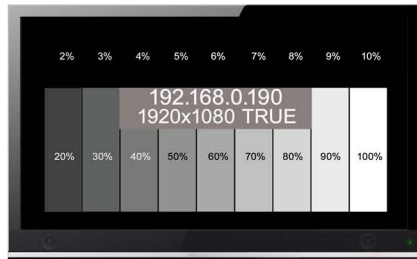

Screen at setup with  
default IP Address  
*Resolution May Vary*

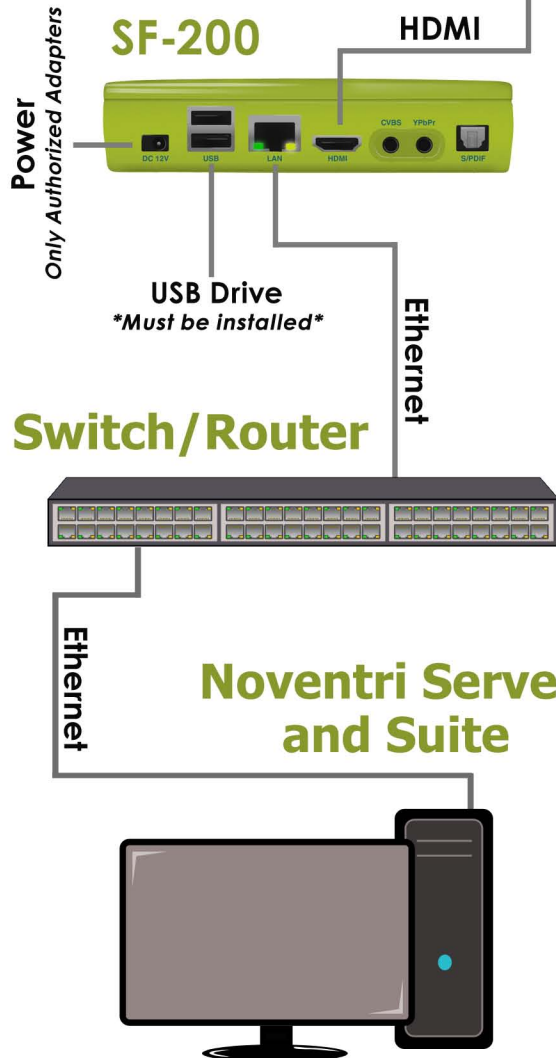

## Tech Support

### Web

[www.noventri.com/digital-signage-support](http://www.noventri.com/digital-signage-support)

### Forum

[www.noventri.com/forum](http://www.noventri.com/forum)

### Email

[support@noventri.com](mailto:support@noventri.com)

### Phone

301-790-0103

### Video Tutorials

[www.youtube.com/user/noventri09](http://www.youtube.com/user/noventri09)



# SF-200 Quick Start Guide



20940 Twin Springs Drive  
Smithsburg, MD 21783-1510

Phone: 301-790-0103

Fax: 301-790-0173

Web: [www.noventri.com](http://www.noventri.com)

Email: [support@noventri.com](mailto:support@noventri.com)



# I. Getting Started

This Quick Start Guide will help you through the typical setup procedure for installation of Noventri Suite and Server, using one computer and a single SF-200 player connected to a Signage Display Screen.

Visit [www.noventri.com/forum](http://www.noventri.com/forum) to register and download the latest version of Noventri Suite.

**Note:** Noventri Suite must be downloaded to ensure proper setup of the SF-200.

## II. Software Installation

1. Verify that the server computer has a Static IP Address, otherwise the SF-200 will not be able to maintain connectivity with the server. Take note of the IP address, as it will be needed later. (Contact your network administrator for assistance.)
2. Install Noventri Suite and Server by double-clicking on the downloaded file from step 1 and follow the on-screen instructions.

### About Noventri Server

The Noventri Server is the interface between Noventri Suite and the SF-200 player.

At installation a default server instance will be created using port 20940. A Firewall exemption may be needed. (Contact your network administrator for assistance.)

The server is monitored by Noventri Service Manager, a service that runs in the background and allows the Server to communicate with the SF-200 player even if the user is logged off.

## III. SF-200 Player Setup

1. Connect the SF-200 player as shown on the reverse side. The USB Drive that comes with the SF-200 **MUST BE INSTALLED**. After the player boots up, it will display the IP address and resolution on the Signage Display Screen. If DHCP is not available or there is no network connectivity, the player will default to: **192.168.0.190**. See Fig.1 (Contact your network administrator for assistance.)

Fig. 1

2. Once a network connection to the SF-200 has been established, open a web browser on the same subnet and type in the IP address displayed on the monitor. The SF-200 Configuration page will open. Enter the default password: **noventri** and click submit. It is recommended to change the default password after configuration.

3. Enter the appropriate network settings. In the Noventri Server Field, enter the static IP address of the server machine where Noventri Server is installed, followed by the port. (Ex.190.168.0.10:20940)

4. Click Submit to save your changes.

**Note:** In some instances, the SF-200 will receive a firmware update when connecting to the server. Make sure the power to the SF-200 is uninterrupted until the firmware update is complete. Fig.2 will appear on the Signage Display Screen to indicate firmware update.

Fig. 2

**WARNING!**  
The Firmware is Being Updated!  
**DO NOT turn off the player!**  
When the firmware update is complete,  
the player will reboot.  
If the progress bar stops for more than one minute,  
please call Noventri Support at 301.790.0103

## IV. Verification

1. To verify that the SF-200 can communicate with Noventri software, start the Noventri Suite. See Fig.3
2. Click on the Manage Tab.
3. When prompted, login to connect to the Server. The Default credential are:  
**Host: localhost**  
**Username: Admin**  
**Password: noventri**

Fig. 3



The SF-200 will appear in the Manage Tab of the Noventri Suite software.


4. Click on the Player Preview image. This will activate the Player Properties panel. See Fig.4

5. In the Player Properties panel, set the Player name and location. Click Apply.

6. Select Edit Timezone. Choose the player's time zone settings, click OK, and then click Apply.

7. Set the SF-200 Resolution and the screen Orientation to match the resolution and orientation of the Signage Display Screen.

Fig. 4

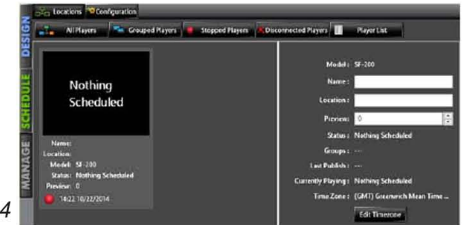

## Noventri Remote (Optional)

Point the Noventri Remote at the front of the SF-200.

**Reboot Player:** Press the Player Button. The player will reboot in 10 seconds.

**Reset Default Network Settings:** Press the Menu Button, and select Yes using the arrow keys. The Player will reboot when completed.



## Resources

Learn Noventri Suite

Visit the Noventri Forum to access manuals, videos and tutorials.

[www.noventri.com/forum](http://www.noventri.com/forum)

Watch the Quick Start Guide Video



[www.noventri.com/quick-start-guide](http://www.noventri.com/quick-start-guide)